
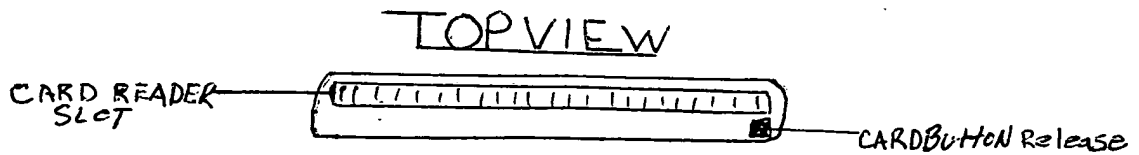


FIG- 1


# CONTROL CARD CHECK

0.37"L x 2.37"W x 3.68"H

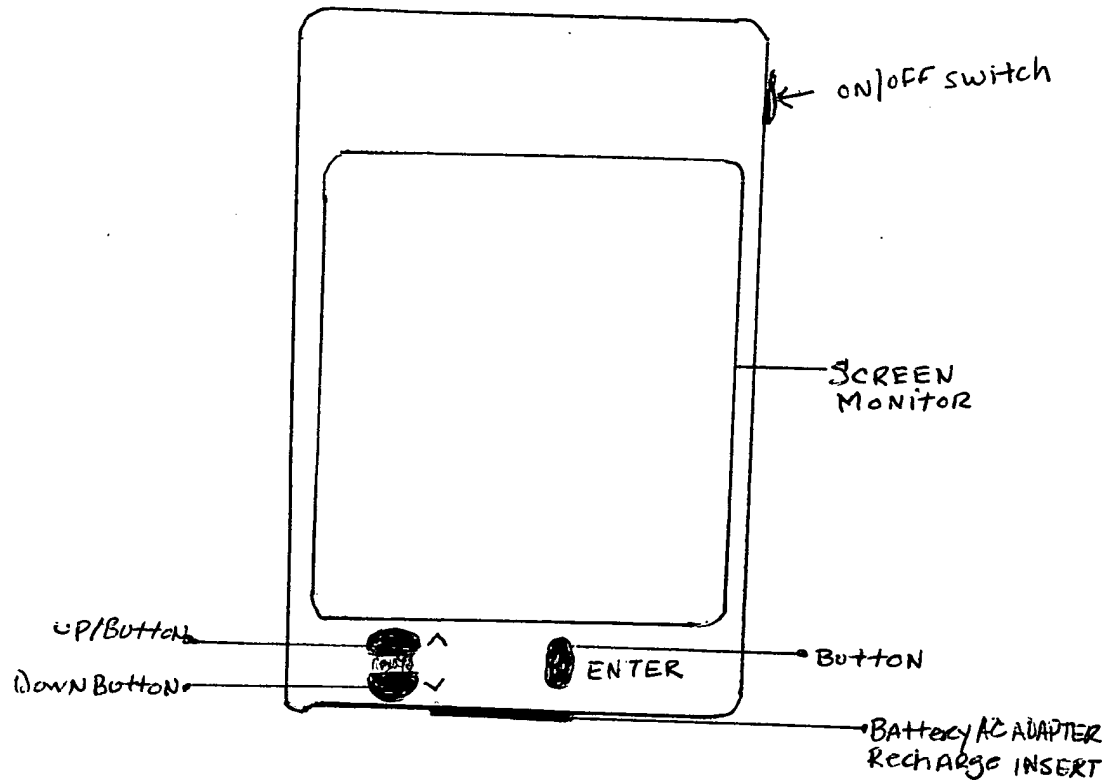

FIG=2


EXAMPLE  
Hypothetical

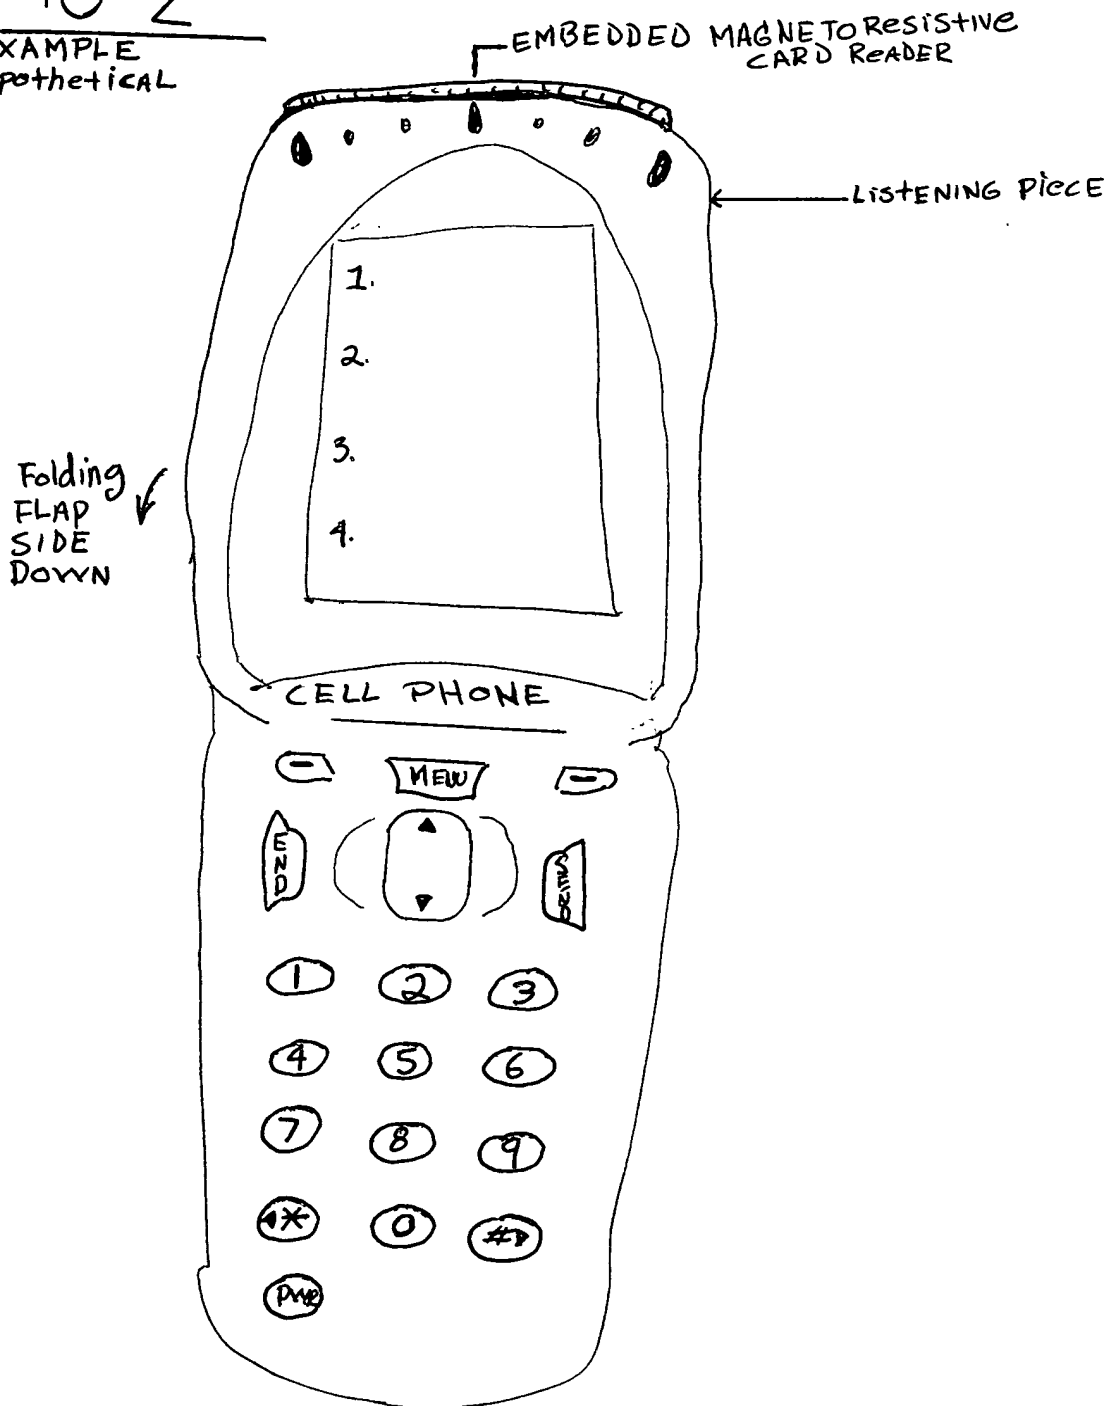

COMPRISES CLAIM: 1


FIG-2A

EXAMPLE  
Hypothetical

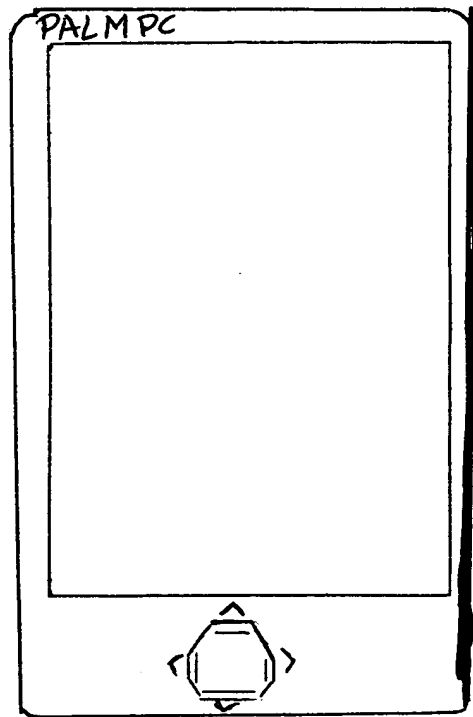

TOP View

 NEW INTEGRATED  
MAGNETORESISTIVE  
CARD READER




EXISTING  
FILE CARD READER

COMPRISES CLAIM:1

# CONTROL CARD CHECK


FIG=3

INSERT CARD INTO  
PORTABLE MAGNETIC STRIPE  
CARD READER SLOT,

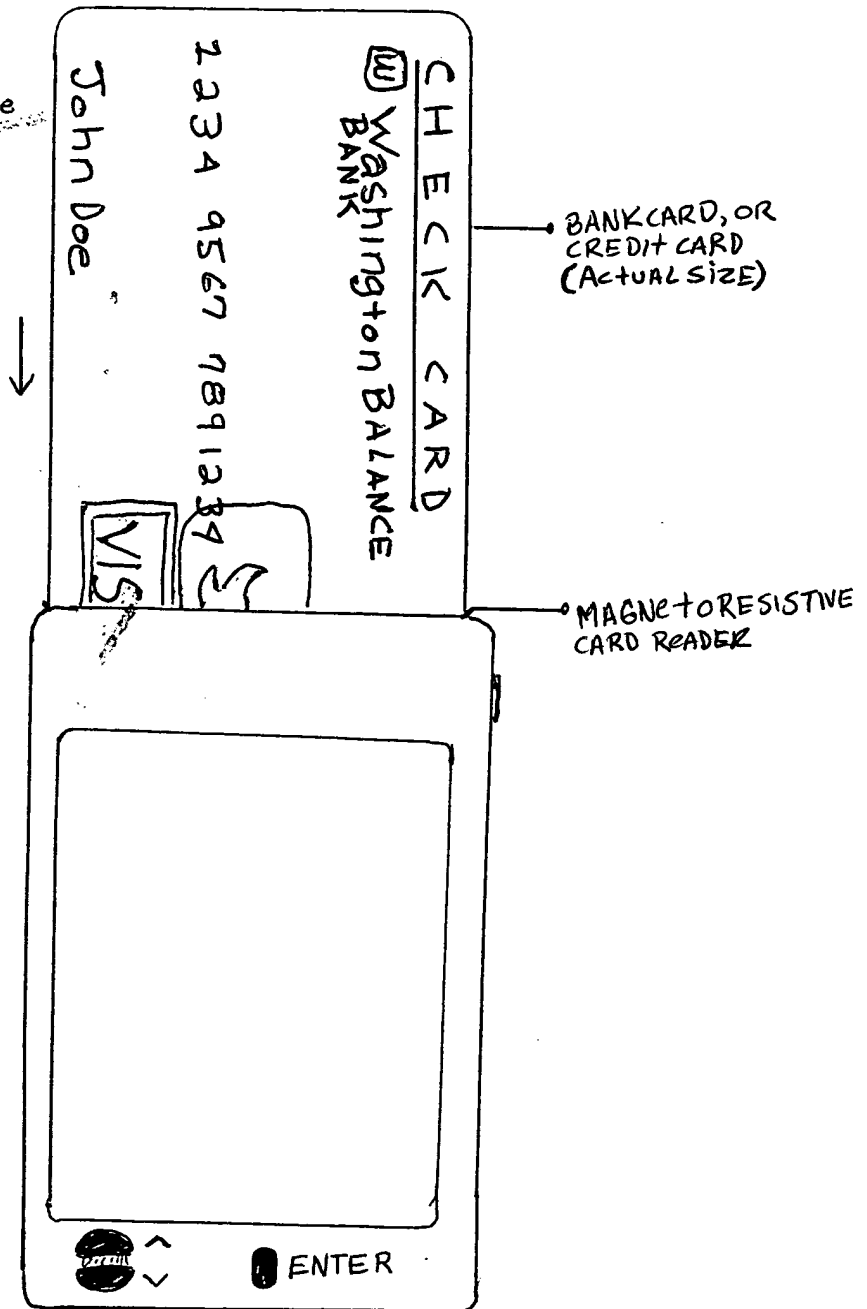

COMPRISES CLAIM: 2

FIG= 4

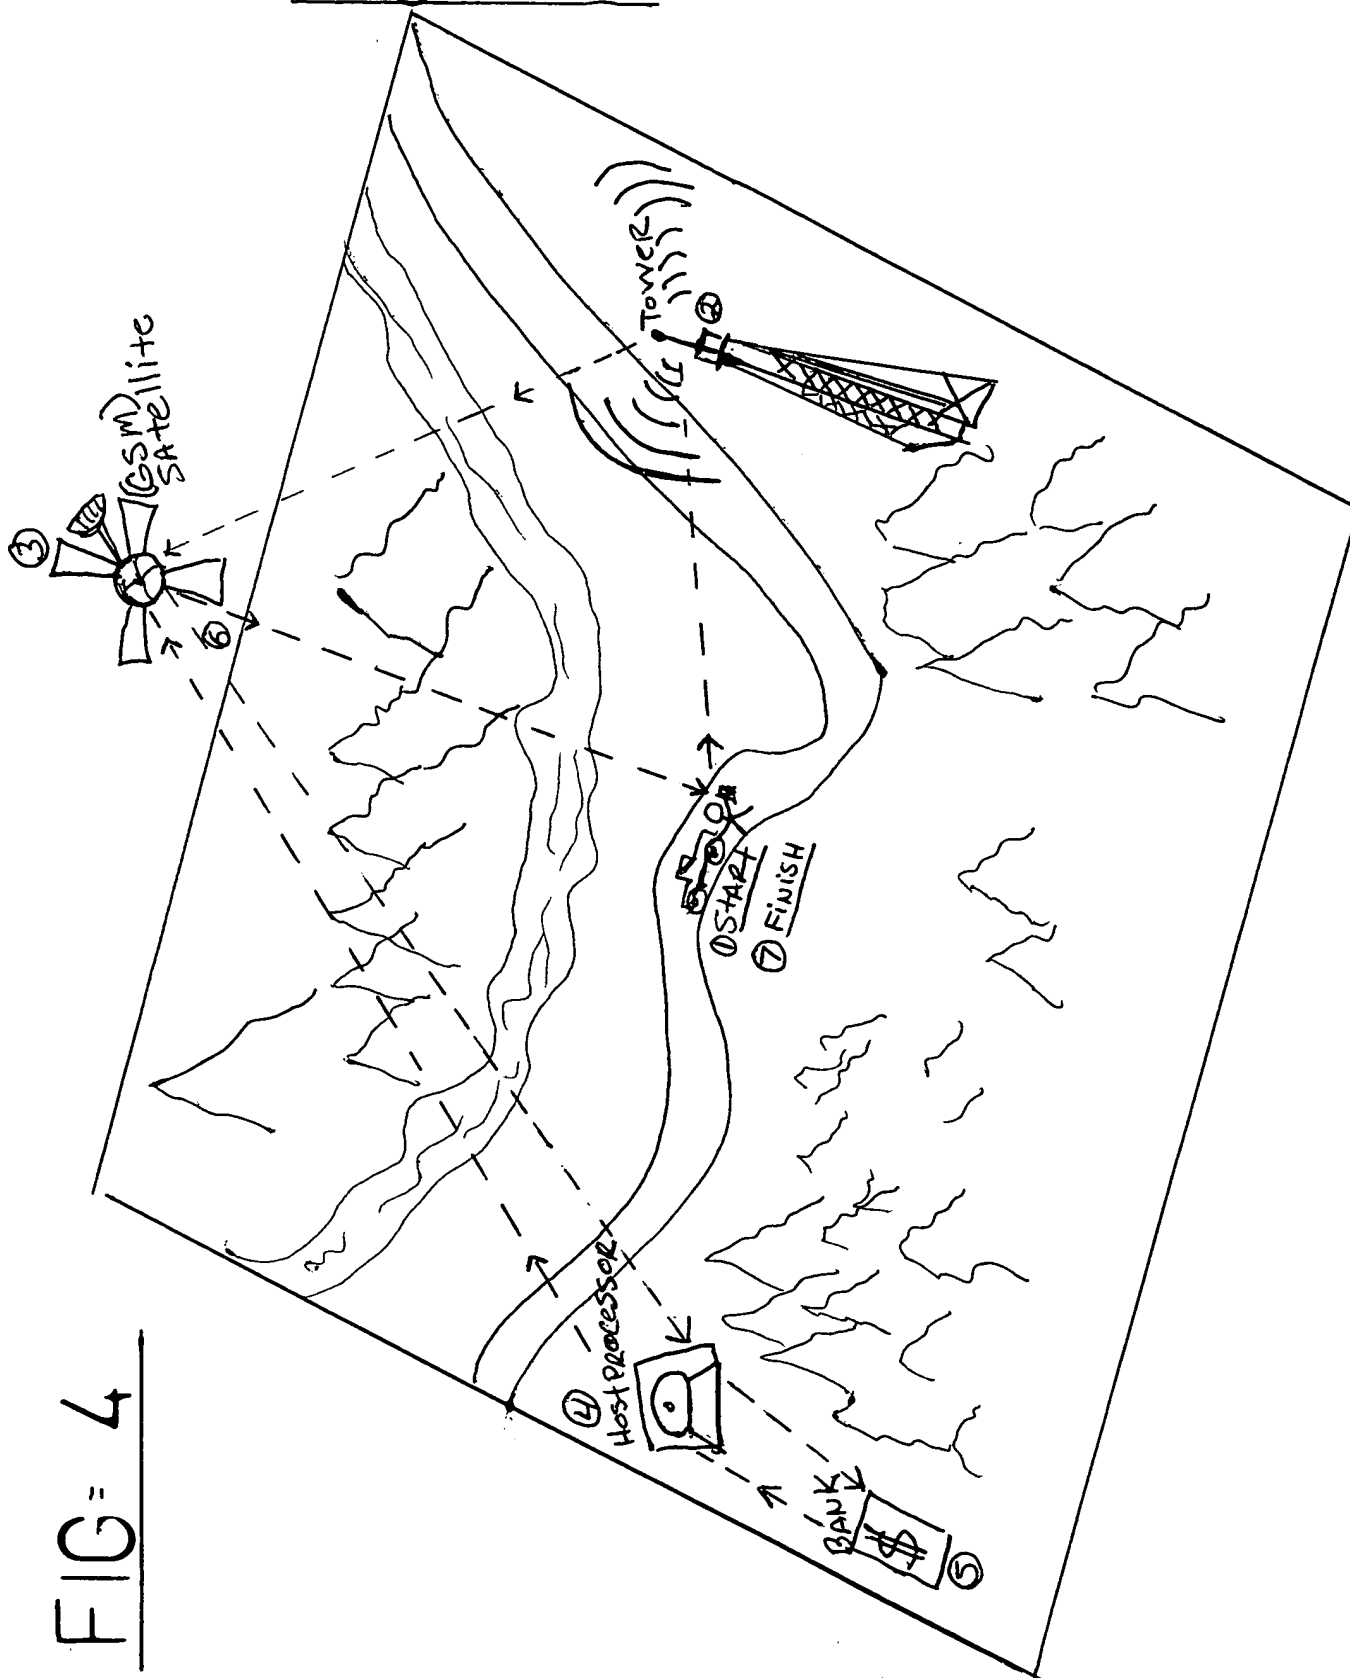

FIG= 4

FIG= 5

# CONTROL CARD CHECK

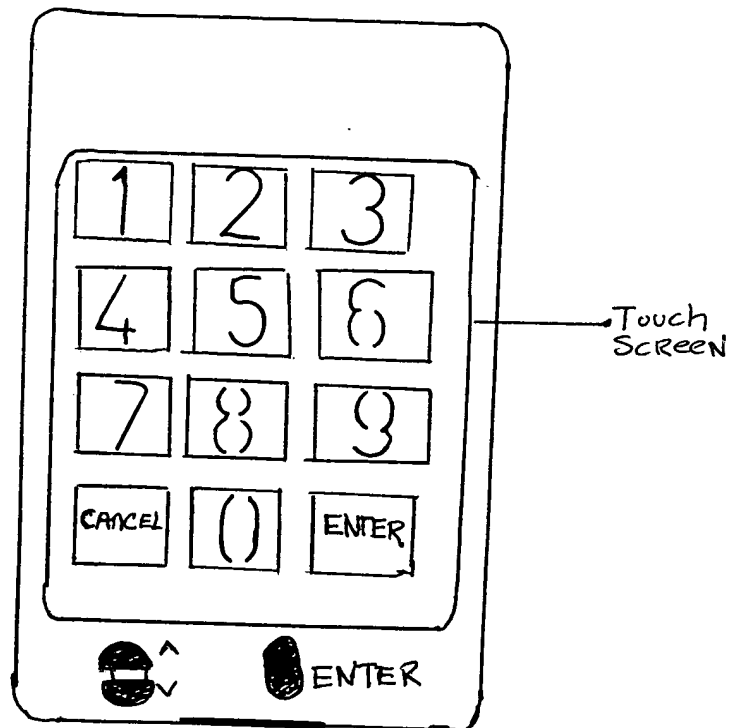


FIG = 6

# CONTROL CARD CHECK

4 options

A hand-drawn diagram of a control card. The card is rectangular with rounded corners. It contains a menu with four options, each separated by a horizontal line:

- A. CURRENT BALANCE
- B. Daily TRANSACTIONS
- C. Weekly TRANSACTIONS
- D. PAYMENT INFO.

Below the menu, there are two buttons: "CANCEL" and "ENTER". At the bottom of the card, there are two physical buttons: a circular button with an upward arrow (^) and a downward arrow (v), and a rectangular button labeled "ENTER".

FIG= 7

# CONTROL CARD CHECK

CURRENT BALANCE

AS OF OCTOBER 1, 2003;  
YOUR BALANCE IS.

1000.00 \$

CANCEL

Continue ▶

⏮

ENTER



FIG=8

# CONTROL CARD CHECK

DAILY TRANSACTIONS  
Today is October 1, 03

DATE:	WITHDRAWAL	DESCRIPTION
10/01/03	-7.39	RAIP SUPER
10/01/03	-19.00	KINKO'S
10/01/03	-5.00	STARBUCKS
10/01/03	+137.17	CUSTOMER Deposit



CANCEL ◀ BACK CONTINUE ▶

⬇ ENTER

FIG = 9

# CONTROL CARD CHECK

Weekly Transactions		
DATE:	WITHDRAWAL	DESCRIPTION
10/01/03	-5.00	STARBUCKS
10/01/03	+137.17	CUSTOMER Deposit
9/29/03	-3.37	USPS
9/28/03	-4.32	Blockbuster VIDEO
9/27/03	-18.00	AMC Movie thca.

  ENTER

FIG=1()

# CONTROL CARD CHECK

A hand-drawn diagram of a control card check screen. The screen is rectangular with rounded corners. Inside, there is a rectangular frame containing the following text:

PAYMENT INFO  
CARD# 1234 5678 9123 4567  
Federated Unity BANK  
PO Box 00105  
Northridge, CA. 91405  
DUE DATE  
10-01-04

Below the frame, there are three buttons labeled "CANCEL", "FINISH", and "BACK". The "FINISH" button has a left-pointing arrow next to it. Below these buttons, there are two circular buttons. The left one has an upward arrow and a downward arrow. The right one is labeled "ENTER".